
Operating Manual

Remote connection to the IQ SENSOR NET 2020 XT USB

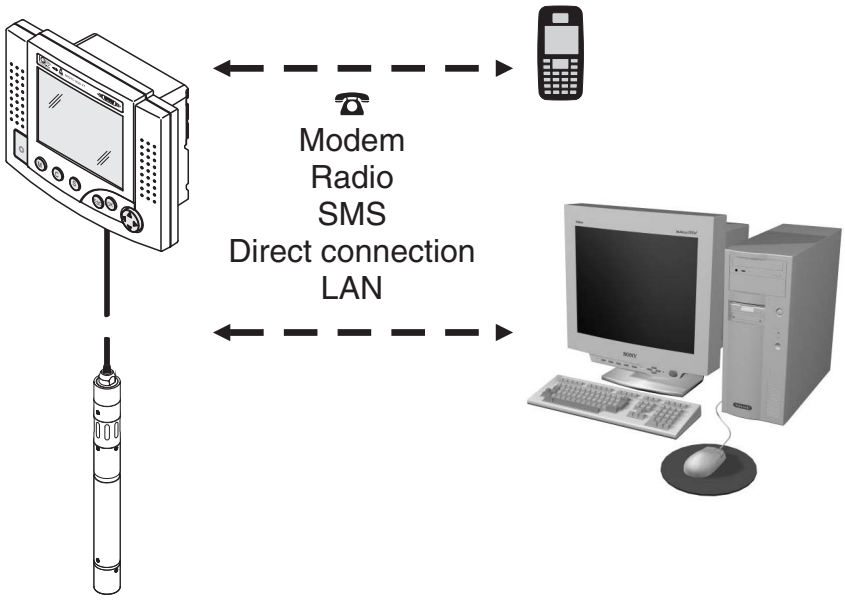

(Remote) Data transmission to the IQ SENSOR NET 2020 XT USB System XT via
- fixed line telephone network
- mobile network
- radio link
- direct connection
- LAN connection

ba75790e02 04/2015

Copyright © 2016 Xylem Analytics Germany GmbH
Printed in Germany.

Remote connection to the IQ SENSOR NET System 2020 XT

1 Overview 5
1.1 How to use this component operating manual 5
1.2 Remote data transmission to the IQ SENSOR NET System 2020 XT USB 6

2 Transmission via fixed line and mobile network 9
2.1 Structure 9
2.2 System requirements 10
2.2.1 Modem system requirements 10
2.2.2 IQ SENSOR NET system requirements 10
2.2.3 System requirements of the USB-RS232 adapter 11
2.2.4 PC system requirements 11
2.3 Settings of a GSM modem on the IQ SENSOR NET side . 12
2.4 Remote query of measured value via SMS 14

3 Transmission via radio modem 15
3.1 Structure 15
3.2 System requirements 16
3.2.1 System requirements of the radio modem 16
3.2.2 IQ SENSOR NET system requirements 16
3.2.3 System requirements of the USB-RS232 adapter 17
3.2.4 PC system requirements 17
3.3 Settings at the radio modems 18

4 Commissioning 19
4.1 Connecting the (radio) modem to the IQ SENSOR NET . . 19
4.2 Preparing the PC for transmission 19

5 Direct connection IQ SENSOR NET <-> PC 20

6 Network connection 21

7 What to do if 22

1 Overview

1.1 How to use this component operating manual

The present operating manual complements the system operating manual for the **IQ SENSOR NET** system 2020 XT USB. It contains the description of the remote connection to the IQ SENSOR NET system 2020 XT USB.

File this operating manual directly behind the system operating manual.

Structure of the IQ SENSOR NET operating manual

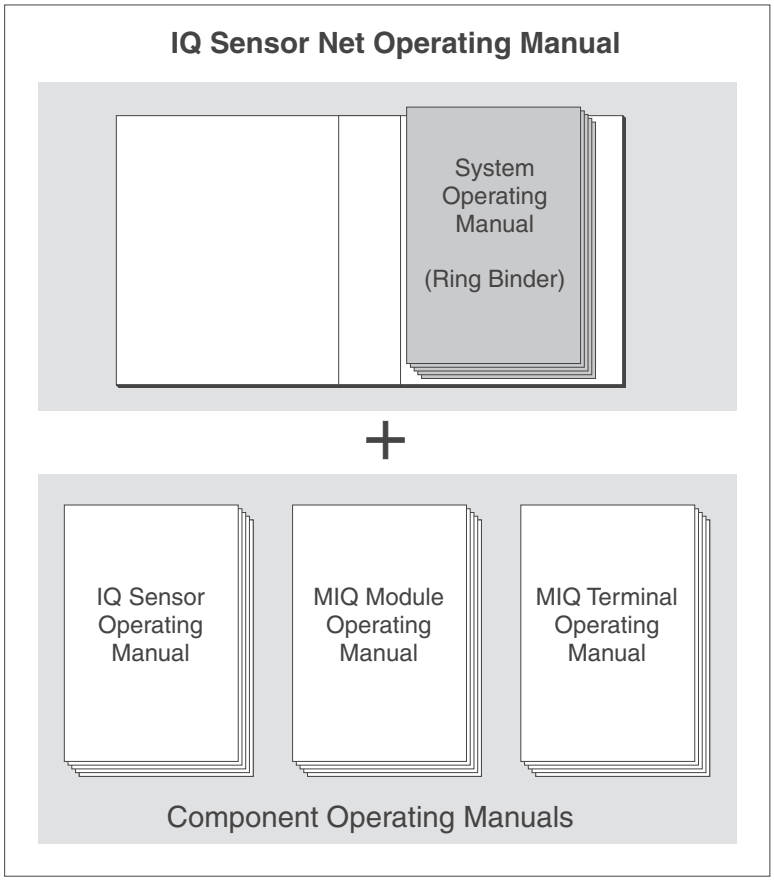


Fig. 1-1 Structure of the IQ SENSOR NET operating manual

The IQ SENSOR NET operating manual has a modular structure like the IQ SENSOR NET system itself. It consists of the system operating manual and the operating manuals of all the components used.

The space in the ring binder behind the system operating manual is intended for filing the component operating manuals. Please file all component operating manuals here so that all information is quickly available in one location.

1.2 Remote data transmission to the IQ SENSOR NET System 2020 XT USB

General characteristics

The MIQ/TC 2020 XT terminal/controller expands the IQ SENSOR NET by an interface for a modem. Thus it is possible to transmit data between the IQ SENSOR NET and a remote PC or mobile phone. The IQ SENSOR NET can be connected to the fixed line telephone network, the mobile telephone network or via a direct radio link. The connection to the IQ SENSOR NET can be online or offline via SMS.

The MIQ/TC 2020 XT terminal/controller can be connected to a local network via a USB/Ethernet adapter and, for example, operated from a PC in the network.

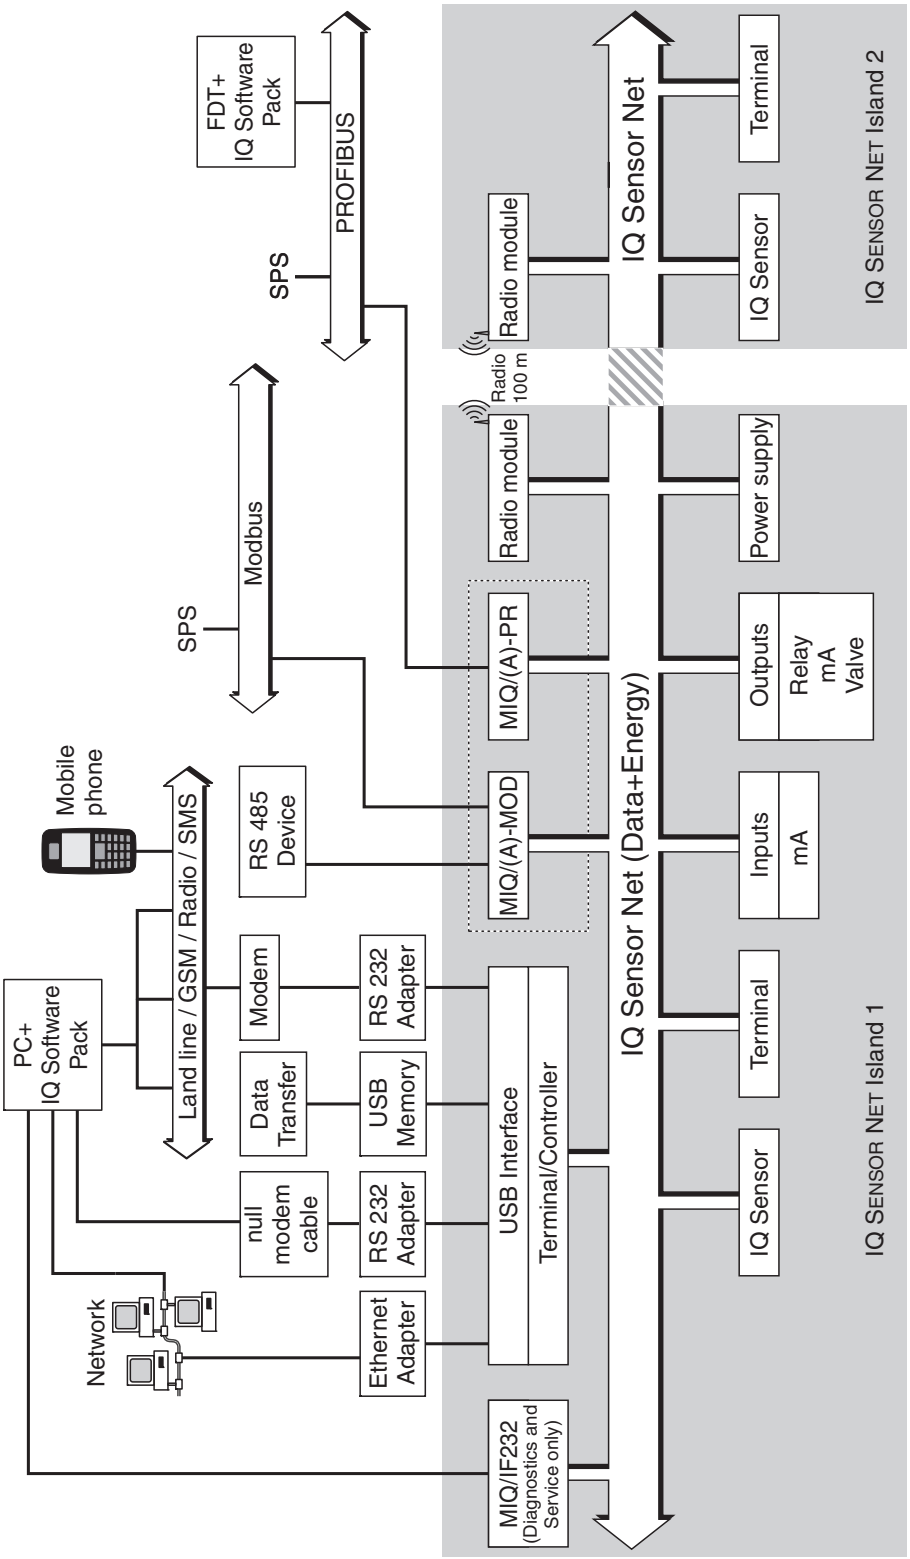


Fig. 1-2 Remote data transmission with the MIQ/TC 2020 XT

Connection options via mobile network, fixed line network and radio link

- IQ SENSOR NET (MIQ/TC 2020 XT + USB-RS232 adapter) <-> analog modem <-> fixed line telephone network <-> analog modem <-> PC
- IQ SENSOR NET (MIQ/TC 2020 XT + USB-RS232 adapter) <-> analog modem <-> fixed line telephone network <-> mobile network <-> GSM modem <-> PC
- IQ SENSOR NET (MIQ/TC 2020 XT + USB-RS232 adapter) <-> GSM modem <-> mobile network <-> fixed line telephone network <-> analog modem <-> PC
- IQ SENSOR NET (MIQ/TC 2020 XT + USB-RS232 adapter) <-> GSM modem <-> mobile network <-> GSM modem <-> PC
- IQ SENSOR NET (MIQ/TC 2020 XT + USB-RS232 adapter) <-> radio modem <-> air <-> radio modem <-> PC
- IQ SENSOR NET (MIQ/TC 2020 XT + USB-RS232 adapter) <-> GSM modem <-> SMS <-> mobile phone
- IQ SENSOR NET (MIQ/TC 2020 XT + USB-RS232 adapter) <-> GSM modem <-> SMS <-> GSM modem <-> PC



Note
A modem connection via the MIQ/T2020 PC software terminal counts as a terminal component. A maximum of three terminal components can be used in the IQ SENSOR NET at the same time. Only one modem connection can ever be made to the IQ SENSOR NET.

Functions that can be carried out

With the aid of the IQ SENSOR NET software pack, for example, the following functions can be carried out on a remote PC:

- (Remote) Operation/monitoring of the IQ SENSOR NET with the MIQ/T2020 PC software terminal. The software terminal has the same operating concept as other terminal components (e.g. MIQ/TC 2020 XT). This means it is not necessary to "get used" to it when changing between the different types of terminal.
- (Remote) Data transmission of current measurement data
- (Remote) Data transmission of stored measurement data
- (Remote) Backup/loading of the IQ SENSOR NET system configuration



Note
Details of the operation of the software are given in the operating manual for the IQ SENSOR NET software pack. All other general information on components, functions and operation of the *IQ SENSOR NET* system 2020 XT USB is given in the system operating manual.

2 Transmission via fixed line and mobile network

2.1 Structure

Analog or GSM modems can be used for the transmission on the IQ SENSOR NET and PC side. With a GSM modem on the IQ SENSOR NET, measured values can be queried from the IQ SENSOR NET system and automatic alarm messages received via SMS.

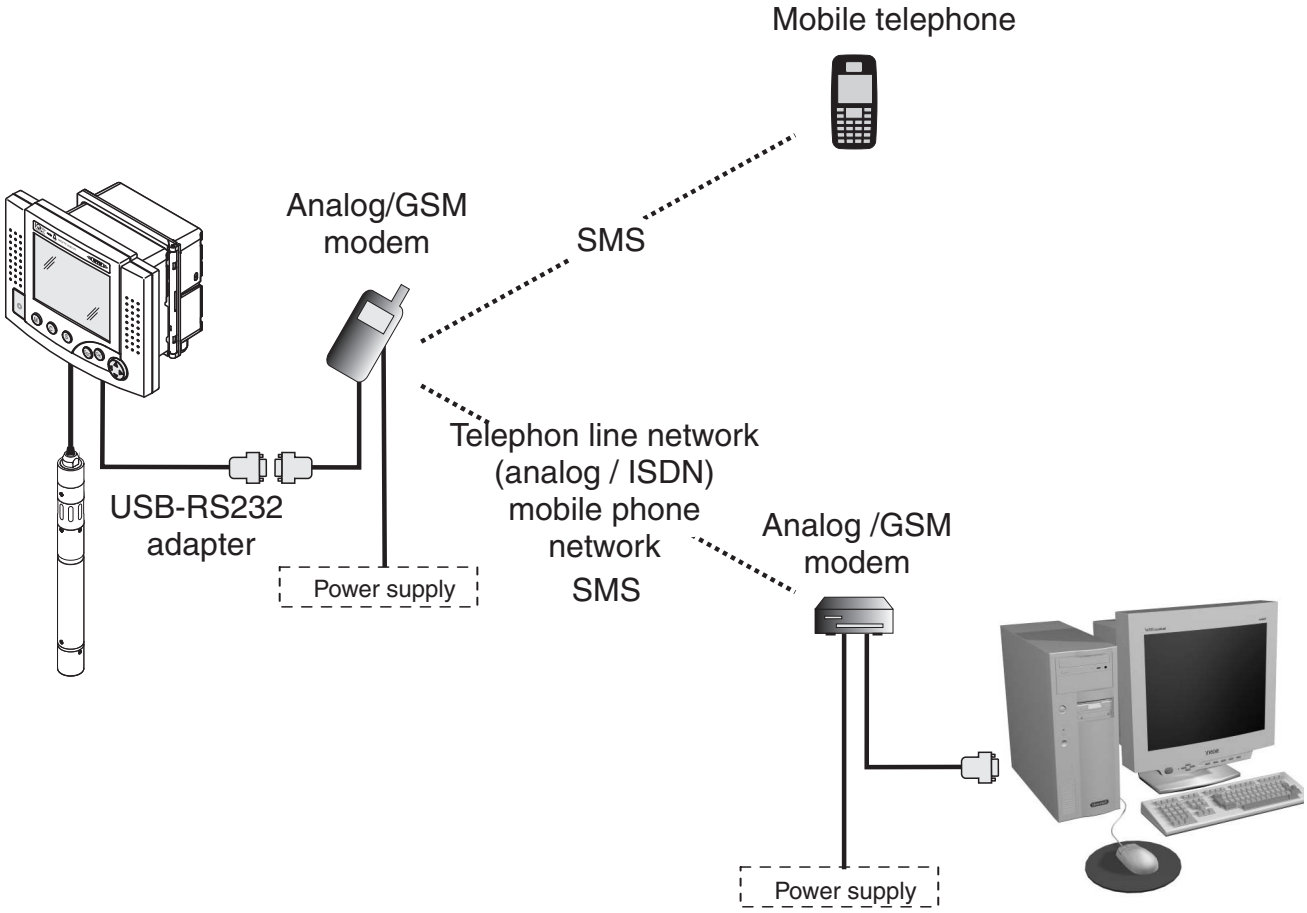


Fig. 2-1 (Remote) Data transmission with analog modems and GSM modems

Note
How to connect the modems to the IQ SENSOR NET and the PC is described in section 4 COMMISSIONING.

2.2 System requirements

2.2.1 Modem system requirements

The modems must meet the following requirements:

Analog modem

- compatible to the Hayes-(AT-) standard
- serial RS232 interface (for modem on IQ SENSOR NET side)
- power supply unit, cable for data transmission
- analog telephone mainline with telephone number (for modem on IQ SENSOR NET side)

Recommendations:

IQ SENSOR NET side:	devolo MicroLink 56k i
PC side:	devolo MicroLink 56k ior Creatix V.90

GSM modem

- compatible with the AT command set according to the GSM 07.07 specification
- serial RS232 interface (for modem on IQ SENSOR NET side)
- power supply unit, aerial, cable for data transmission
- country-specific mobile network (in Germany: D1 or D2)

Recommendation: Siemens TC35i or Siemens MC35i

2.2.2 IQ SENSOR NET system requirements

- Terminal/controllerMIQ/TC 2020 XT
- USB-RS232 adapter to connect the IQ SENSOR NET and modem

2.2.3 System requirements of the USB-RS232 adapter

A USB-RS232 adapter is required to connect a modem to the USB interface of the MIQ/TC 2020 XT.
A driver has to be installed in the MIQ/TC 2020 XT for the operation of the adapter.

In the MIQ/TC 2020 XT, the driver for the following adapter is preinstalled:

EDGEPORT/1 W/ 2M CAPTIVE CABLE
USB TO 1PORT EIA-232 SERIAL DB9

Information on this USB-RS232 adapter and how to order it is available on the Internet under www.digi.com.

2.2.4 PC system requirements

Hardware requirements

- AT-compatible computer with Pentium processor or higher (recommended: 500 MHz or higher)
- Minimum 8 MByte RAM (recommended: 64 MByte or higher)
- Hard disk with at least 10 Mbytes available memory
- VGA/SVGA graphic card with monitor
- CD-ROM drive
- Connection cable (PC <--> modem)
- Operable modem (see section 3.2.1)



Note
The use of an external modem with USB or RS232 interface is preferable. In the case of internal notebook modems, problems with the transmission speed can occur.

Software requirements

- Windows 95 or higher
- IQ SENSOR NET Software Pack

2.3 Settings of a GSM modem on the IQ SENSOR NET side

The connected GSM modem has to be initialized so that the IQ SENSOR NET communicates with the GSM modem. For this the PIN of the GSM modem is required during the initial operation.

Initializing the modem

1	Using **<S>**, open the *Settings* menu.
2	Using **<▲▼◀▶>**, select the menu item, *System settings* and confirm with **<OK>**.
3	Using **<▲▼◀▶>**, select the menu item, *GSM* and confirm with **<OK>**. On first operation the *GSM* dialog box with the prompt to enter the PIN opens up.

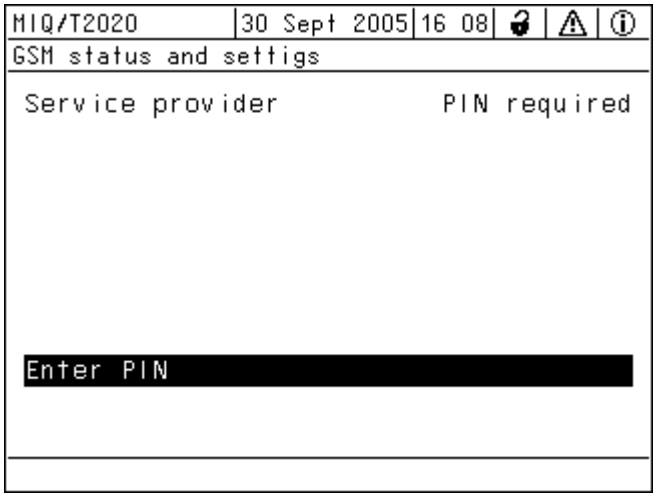


Fig. 2-2 Setting menu for the GSM modem

4	Confirm with **<OK>**.

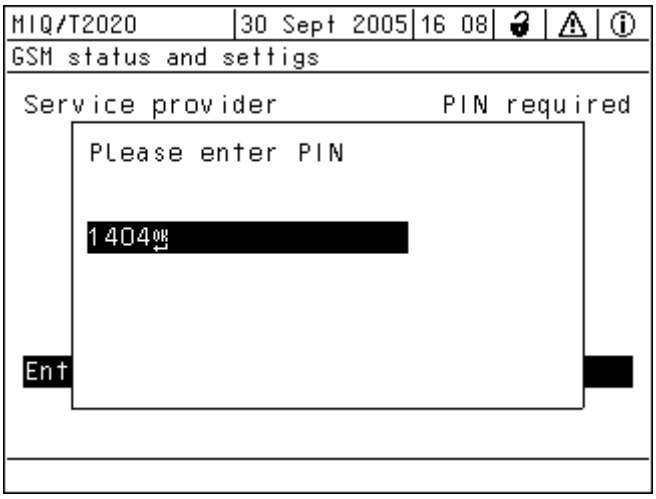


Fig. 2-3 Entering the PIN

5	Using **<▲▼◀▶>** and **<OK>**, enter the PIN and confirm with **<OK>**. The *GSM Status and settings* menu opens up.

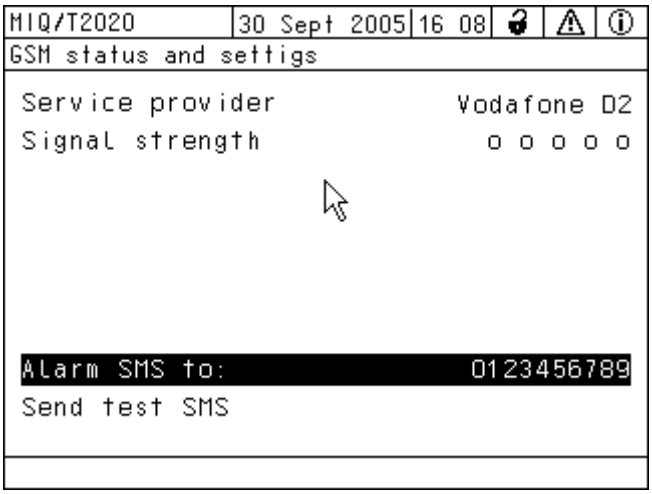


Fig. 2-4 Status and settings menu for GSM modem

Note
The entered PIN is stored in the IQ SENSOR NET. When the modem is put into operation again it is automatically initialized with the stored PIN. It will not be necessary to enter the PIN once again when calling up the *GSM Status and settings* menu.

Menu item	Selection/Values	Explanations
Service provider		Names the mobile network provider.
Signal strength	0 - 5 rings (○)	Quotes the strength of the modem receive signal (maximum reception = 5 rings)
Alarm SMS to:	telephone number of max. 20 digits	Here you name the telephone number of the receiver to whom the alarm SMS should be sent. The alarms are configured in the menu, *Alarm settings*. More detailed information on this is given in the system operating manual. If an alarm from the alarm list occurs, a corresponding SMS is sent.
Send test SMS		Here you can test the transmission with the aid of a test SMS to the receiver. To do so select this menu item and confirm with **<OK>**.

2.4 Remote query of measured value via SMS

You can query current measured values with an operable GSM modem at the IQ SENSOR NET. To do so, send an SMS with the following texts to the phone number of the GSM modem.

Querying a single measured value

```
value xxxx y
```

with:

- xxxx = access password to the IQ SENSOR NET (lock/unlock settings)
- y = sensor number (one or two digits, e.g. "1" corresponds to sensor S01, "12" to sensor S12)

Querying all measured values

```
value xxxx all
```

A separate SMS is sent for each sensor.



Note
Even when the access control is deactivated, the access password must be entered in the query. On delivery, the access password of the MIQ/TC 2020 XT is set to "1000".

3 Transmission via radio modem

3.1 Structure

The transmission via radio modems must be made with two similar radio modems:

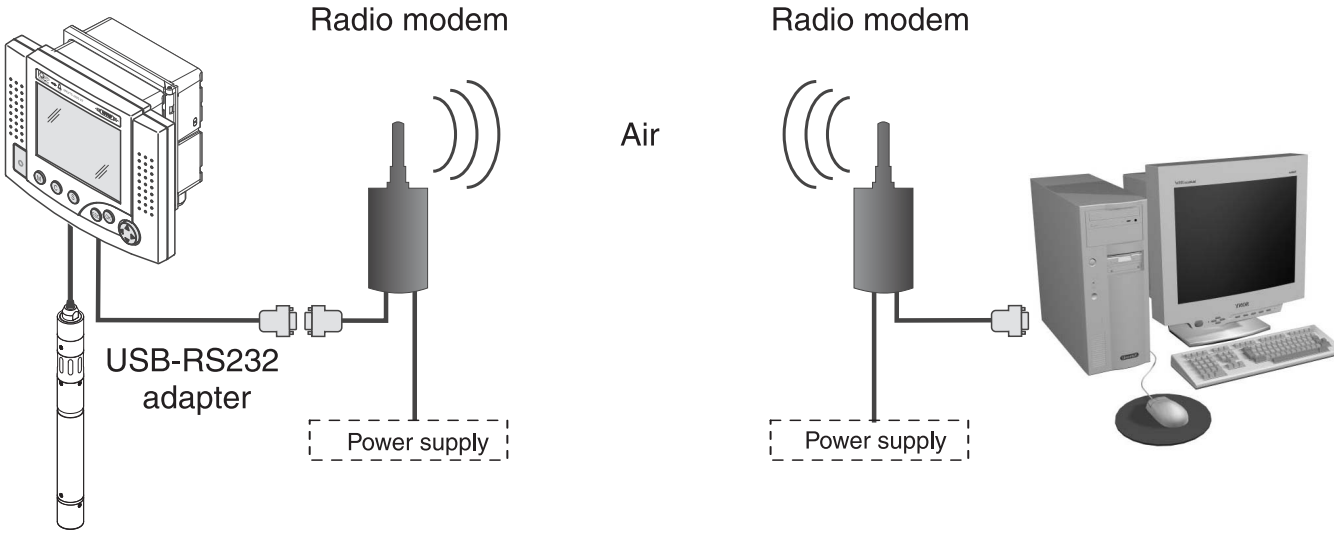


Fig. 3-1 (Remote) Data transmission with radio modems

Note
How to connect the radio modem to the IQ SENSOR NET and the PC is described in section 4 COMMISSIONING.

Influences on the transmission

The following factors have an impact on the radio transmission:

- Distance between sender and receiver
- Barriers between sender and receiver
- Sender power
- Sensitivity of the radio receiver
- Amplification power of the sending and receiving aerial
- Attenuation of the aerial cable
- Mounting height of the aerial
- Other interferences

Note
Further information and the suitable equipment in order to establish an optimum radio transmission is available from your specialist dealer. When establishing a radio transmission also observe the relevant national legal requirements, concerning e. g.:

- Restrictions when using a radio frequency and
- the possibly necessary purchase of a license for the use of a radio frequency.

In Germany, the regulatory authority for telecommunication and mail (Regulierungsbehörde für Telekommunikation und Post - RegTP) is responsible for the national legal requirements.

3.2 System requirements

3.2.1 System requirements of the radio modem

- Transparent data transmission
- serial RS232 interface
- power supply unit, aerial, cable for data transmission and line power connection
- data transmission rate of the radio link: min. 9600 bits/s

Recommendation: Radio modems by Satel
(Satelline product series)
with cable set for data transmission and line power connection (www.satel.fi)

3.2.2 IQ SENSOR NET system requirements

- Terminal/controllerMIQ/TC 2020 XT

3.2.3 System requirements of the USB-RS232 adapter

A USB-RS232 adapter is required to connect a modem to the USB interface of the MIQ/TC 2020 XT.
A driver has to be installed in the MIQ/TC 2020 XT for the operation of the adapter.

In the MIQ/TC 2020 XT, the driver for the following adapter is preinstalled:

EDGEPORT/1 W/ 2M CAPTIVE CABLE
USB TO 1PORT EIA-232 SERIAL DB9

Information on this USB-RS232 adapter and how to order it is available on the Internet under www.ionetworks.com.

3.2.4 PC system requirements

Hardware requirements


- AT-compatible computer with Pentium processor or higher (recommended: 500 MHz or higher)
- Minimum 8 MByte RAM (recommended: 64 MByte or higher)
- Hard disk with at least 10 Mbytes available memory
- VGA/SVGA graphic card with monitor
- CD-ROM drive
- Connection cable (PC <--> modem)
- operable radio modem (see section 3.2.1)

Software requirements

- Windows 95 or higher
- IQ SENSOR NET Software Pack

3.3 Settings at the radio modems

For the data transmission between two radio modems to be error free, both radio modems (on the IQ SENSOR NET side and on the PC side) must be configured in the same way.



Note
Details on the configuration of your radio modem are given in the operating manual of your radio modem.

Some settings have to be done on the radio modem.
All settings must be identical on both modems.
The settings given as an example have to be adjusted accordingly.

Settings on the radio modem

Data transmission speed of the serial interface:	38400 bits/s
Start delay:	0 ms
Transmitting power: The required transmitting power depends e.g. on the local conditions.	e.g. 500 mW
Transmitting frequency: Certain national transmitting frequencies are allocated to individual transmitting powers.	e.g. range 869.400 - 869.650 MHz



Note
For the operation of radio transmissions, the national regulations and conditions for the use of radio frequencies always have to be observed.
Possible restrictions when using a radio frequency:

- Transmitting power
- Duty Cycle
- Channel band width (affects the transmission speed)
- Licenses



Note
Information on recommended radio modems (Satelline product series) and further accessories (cable for power supply and data transmission) is available from Satel or on the Internet under www.satel.fi.

4 Commissioning

4.1 Connecting the (radio) modem to the IQ SENSOR NET

Note
Only the adapter mentioned as the system requirement is suitable as the USB-RS232 adapter (see section 3.2.3).

1	Connect the USB-RS232 adapter to the MIQ/TC 2020 XT.
2	Connect the USB-RS232 adapter to the (radio) modem.
3	Prepare the (radio) modem for operation according to the operating manual.
4	Attach the power supply for the IQ SENSOR NET according to the system operating manual.
5	Provide the power supply to the (radio) modem according to the operating manual of the (radio) modem. Thus, the IQ SENSOR NET is ready for communication via a (radio) modem.

4.2 Preparing the PC for transmission

The following preparations for a (radio) modem connection with the IQ SENSOR NET are required on the PC:

6	Connect the (radio) modem to the PC (see operating manual of the modem).
7	Install the IQ SENSOR NET Software Pack on the PC (see operating manual of the IQ SENSOR NET Software Pack).

5 Direct connection IQ SENSOR NET <-> PC

By means of a 9-pin standard zero modem cable, you can also directly connect the USB-RS232 adapter to a PC. Thus it is possible, for example, to load measurement data on a PC quickly and without any expensive remote connection on site. The IQ SENSOR NET Software Pack serves as the PC communication software.



Note
9-pole standard zero modem cables are available via the computer specialist trade.

Establishing a direct connection

- Disconnect the modem connection cable from the (radio) modem.
- Using the zero modem cable, connect the plug of the USB-RS232 adapter to the RS 232 interface (COM port) of the PC.
- Start the MIQ/T2020 PC software terminal on the PC.
- In the start routine of the MIQ/T2020 PC, select the *Radio link* transmission type. Deactivate the Duty Cycle 10 % check box to achieve the maximum speed. Then press *OK*. The connection is established.



Note
For more information please refer to the operating manual of the IQ SENSOR NET Software Pack.

6 Network connection

You can access the MIQ/TC 2020 XT terminal/controller via a local network and a USB/Ethernet adapter.

Requirements

USB/Ethernet adapter with Asix AX88772 chipset
(e.g. Trendnet TU-ET100)

Network settings

In the *Settings->Terminal settings->Network settings* menu, you can enter a fixed IP address. Alternatively, you can use the automatic address assingment, if your network supports this feature. If you are not sure about the correct settings ask your network administrator.

Establishing a communication link

Follow these steps to establish a communication link from a PC in the network to the MIQ/TC 2020 XT:

- Connect the MIQ/TC 2020 XT to the network via the USB/Ethernet adapter
- On the PC, Start the PC Terminal of the IQS Software Pack.
- Select TCP/IP connection path in the startup routine of the PC Terminal an enter the IP address of the MIQ/TC 2020 XT in the *IP address* entry field. Alternatively, you can enter the Name of the MIQ/TC 2020 XT, if your network supports this feature.



Note
The name is identical to the name set in the *Settings->Terminal settings->Terminal name* menu.

7 What to do if ...

Note
Errors of analog modems or GSM modems caused by the modem or country-specific features concerning the entry of the telephone number are not taken into account here.

Connection to the IQ SENSOR NET is not established

Cause	Remedy
– Telephone number entered incorrectly or incompletely (analog modem or GSM modem)	– Check telephone number – Pay attention to special country-specific features during modem operation – Pay attention to special features during operation on telephone systems
– Faulty devices, e.g. – Modems – USB-RS232 adapter – MIQ/TC 2020 XT	– Replace devices

Transmission to the IQ SENSOR NET is faulty

Cause	Remedy
– Wiring of the connections is faulty	– Check/correct the wiring of the connections to the terminal strip
– Cable is faulty	– Check the cable
– COM connection of the PC incorrectly configured	– Activate the FIFO buffer (if possible) – Set the receive buffer to the highest value (if possible)
– Modem defective	– Replace the modem
– USB-RS232 adapter	– Exchange the USB-RS232 adapter
– USB interface of the MIQ/TC 2020 XT defective	– Send MIQ/TC 2020 XT to WTW

Cause	Remedy
– Transmission quality insufficient (radio modem)	– Distance between radio modems too great – Transmitting power too low – Aerial insufficient or defective – Weather impact Further notes can be found in the operating manual of your radio modem.
– Malfunction due to other transmitters (radio modem)	– select other frequency

Transmission is canceled

Cause	Remedy
– Line quality insufficient (analog modem or GSM modem)	– Redial – Check the telephone connections – on the side of the IQ SENSOR NET – on the side of the PC – Test the transmission speed by means of a data transmission with a PC on the side of the IQ SENSOR NET
– Modem unsuitable	– Check the suitability of the modem (to do so, contact your dealer)

What can Xylem do for you?

We're a global team unified in a common purpose: creating innovative solutions to meet our world's water needs. Developing new technologies that will improve the way water is used, conserved, and re-used in the future is central to our work. We move, treat, analyze, and return water to the environment, and we help people use water efficiently, in their homes, buildings, factories and farms. In more than 150 countries, we have strong, long-standing relationships with customers who know us for our powerful combination of leading product brands and applications expertise, backed by a legacy of innovation.

For more information on how Xylem can help you, go to xyleminc.com.

Service address:
Xylem Analytics Germany
Sales GmbH & Co. KG
WTW
Dr.-Karl-Slevogt-Str. 1
82362 Weilheim
Germany

Tel.: +49 881 183-325
Fax: +49 881 183-414
E-Mail wtw.rma@xyleminc.com
Internet: www.WTW.com

Xylem Analytics Germany GmbH
Dr.-Karl-Slevogt-Str. 1
82362 Weilheim
Germany