
Installation instructions


EH/WB-40

Sensor holder

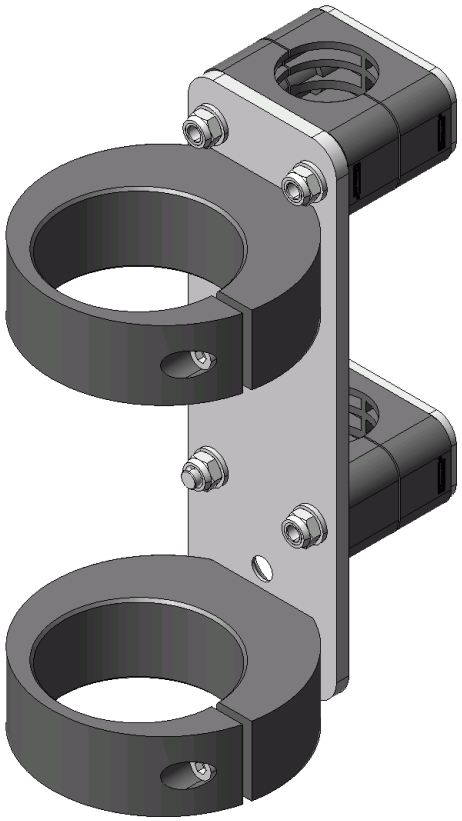


ba77137e01 05/2015

Assembly

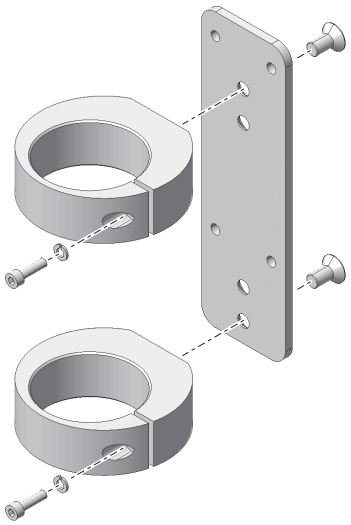

- Screw the two sensor holders to the adapter plate. When doing so, use the outer holes of the adapter plate (see figure).

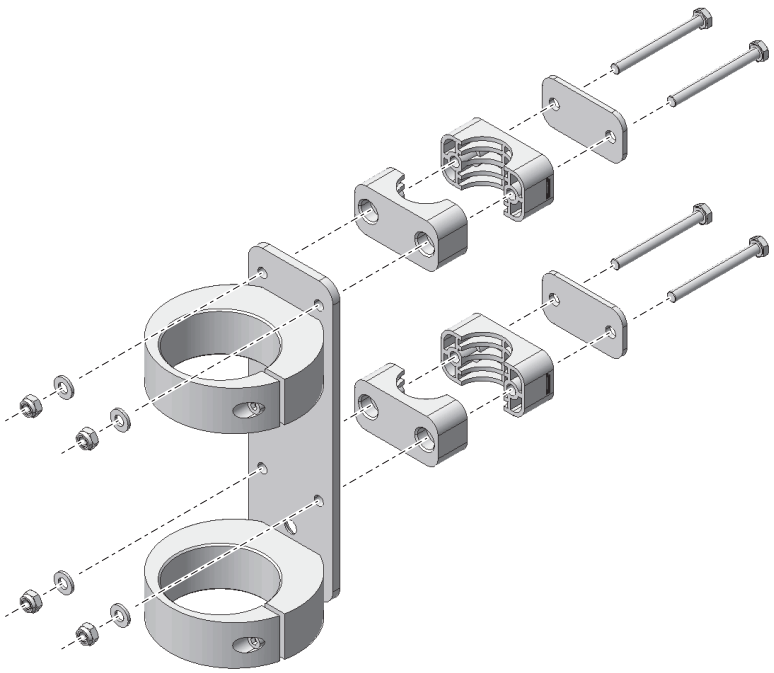

- At first, connect the two pipe clips with the adapter plate loosely.
- Attach the equipment to be installed (e.g. sensor) to the sensor holder.

Technical data

Dimensions	Clamping diameter	Sensor holder: 60 mm Pipe clips: 40 mm
Materials	All metal parts	Stainless steel 1.4301 (V2A)
	Sensor holder	POM
	Pipe clips	PA

Application example

